

Work Order ID 119997

119997

Page 1

June-02-14 10:36:47 AM

Item ID: D412-664-443TRN

Accept

N900040100

Setup Start *NS1*

Revision ID:

Stop *NS2*

Item Name: Crosstube Turning Detail

Start Date: 6/02/14 Start Qty: 1.00

1

Cust Item ID:

Required Date: 6/02/14 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: MLSDate: 14-06-02 Tooling:

Date:

Run Start *NR1*

QC: _____

Date: _____ SPC (Y/N): _____

Date: _____

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D412-664-443

Rev AS

100

0.00

100

MORI SEIKI CNC LATHE LARGE

Mori Seiki

Memo

0.00

Mori Seiki CNC Lathe Large

1-Cut tube on chop saw, leave extra mat'l for facing.
2-Face tube to length.

*1 4**mm 2
14/07/01*

110

QC1- Inspect dimensions to dimension sheet

0.00

110

QC

Memo

0.00

Quality Control

*1 6**mm L
14/07/02*

Work Order ID 119997

June-02-14 10:36:47 AM

119997

Page 2

Item ID: D412-664-443TRN

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: Crosstube Turning Detail

Start Date: 6/02/14 Start Qty: 1.00

1

Cust Item ID:

Required Date: 6/02/14 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start

NR1

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

120

0.00

120

MORI SEIKI CNC LATHE LARGE

Mori Seiki

Memo

0.00

Mori Seiki CNC Lathe Large

1-Fill tube with sand & install plugs on both ends

2-Turn as per Folio FB216

3- File transition lines smooth.

4-Scribe part # as per Dwg D412-664-443

FOLIO REV: AA

DWG REV: A

miril
14/07/02

130

0.00

130

QC1- Inspect dimensions to dimension sheet

QC

Memo

0.00

Quality Control

amnd
14/07/07

140

0.00

140

QC8- Inspect parts - second check

QC

Memo

0.00

Quality Control

JW *14-07-07*

Work Order ID 119997

June-02-14 10:36:47 AM

119997

Page 3

Item ID: D412-664-443TRN Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Crosstube Turning Detail
 Start Date: 6/02/14 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 6/02/14 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150	Large Fab	0.00				<i>KL</i>	<i>14</i>	<i>07-07</i>	
150									
Crosstubes	Memo	0.00							
Crosstubes	Grind machining marks smooth longitude way.								
180	QC15- Crosstube Dimensional Check	0.00				<i>BL</i>		<i>14-07-08</i>	
180									
QC	Memo	0.00							
Quality Control									
190	Identify as per dwg & Stock Location: _____	0.00				<i>BL</i>		<i>14-07-08</i>	
190									
Packaging	Packaging								
Packaging	Memo	0.00							
	Identify and stock in kanban rack								
	Location: <i>LG</i>								

Work Order ID 119997

119997

Page 4

June-02-14 10:36:47 AM

Item ID: D412-664-443TRN

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Crosstube Turning Detail

Start Date: 6/02/14 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 6/02/14 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

200	QC21- Final Inspection - Work Order Release	0.00							
-----	---	------	--	--	--	--	--	--	--

200

QC	Memo	0.00							
----	------	------	--	--	--	--	--	--	--

Quality Control

MLJ 14-07-08

① 14-7-8

Picklist Print

June-02-14 10:36:50 AM

Page 1

Work Order ID: 119997

119997

Parent Item: D412-664-443TRN

D412-664-443TRN

Parent Item Name: Crosstube Turning Detail

Start Date: 6/02/14

Required Date: 6/02/14

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A NEW ISSUE 13-09-26 JLM VERIFIED BY:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D6020-160		Manufactured	No				Each	23.0000		1			

D6020-160

**

Crosstube Material

Location	Loc Qty	Loc Code
BSKT	11	
98110	11	
prelim	12	
105163	12	

mm-l 14/06/26

DART AEROSPACE LTD		Work Order: 119997
Description: Crosstube Assembly		Part Number:
Inspection Dwg:	Rev:	Page 1 of 2


FIRST ARTICLE INSPECTION CHECKLIST

Inspection Sheet	Drawing Dimension	Tolerance	Actual Dimension	Accept	Reject	Method of Inspection	Comments
SIDE A							
	7.98	+0.060	7.98	/		vern	CNC-08
	0.500	±0.010	.500	/		RG	
	2.990	±0.005 -0.000	2.994	/		micr	CNC-04
	2.776	+0.005 -0.000	2.780	/		micr	CNC-04
	2.776	+0.005 -0.000	2.781	/		↓	
	2.880	+0.005 -0.000	2.885	/		↓	
	2.990	+0.005 -0.000	2.993	-		↓	
	3.100	+0.005 -0.000	3.103	/		micr	CNC-05
	3.250	+0.005 -0.000	3.255	/		"	
SIDE B							
	7.98	+0.060	7.98	-		vern	CNC-08
	0.500	±0.010	.500	/		RG	
	2.990	+0.005 -0.000	2.992	/		micr	CNC-04
	2.776	+0.005 -0.000	2.780	/		micr	CNC-04
	2.776	+0.005 -0.000	2.780	/		↓	
	2.880	+0.005 -0.000	2.882	/		↓	
	2.990	+0.005 -0.000	2.993	-		↓	
	3.100	+0.005 -0.000	3.101	-		micr	CNC-05
	3.250	+0.005 -0.000	3.255	-		"	
	130.100	±0.060	130.100	/		App	LG-11

100-1

DART AEROSPACE LTD		Work Order:	119997
Description: Crosstube Assembly		Part Number:	
Inspection Dwg:	Rev:	Page 2 of 2	

WALL THICKNESS MEASUREMENT

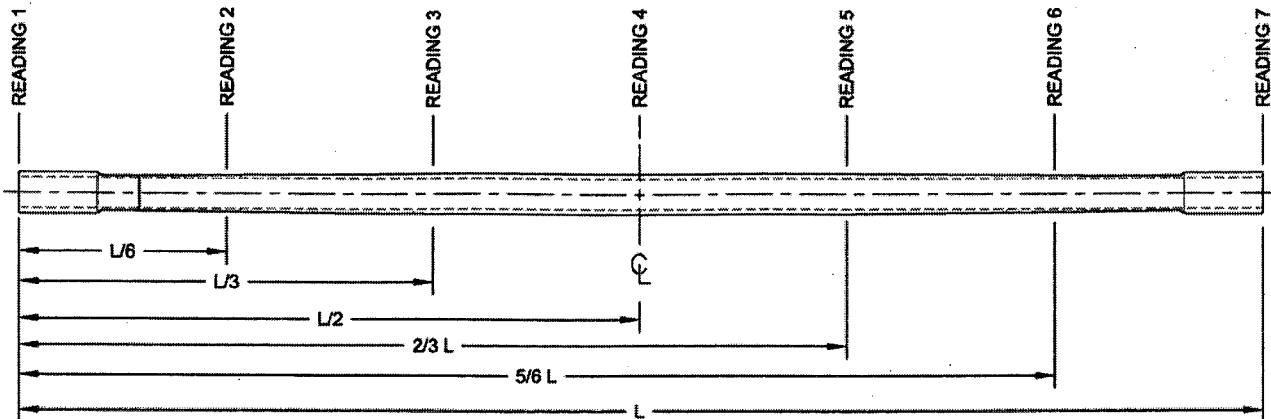

Location	WALL THICKNESS MEASUREMENT (IN)				Deviation Δw (max-min)	TOLERANCE
	w1	w2	w3	w4		
READING 1 L= 0"	.301	.302	.301	.298	.004	
READING 2 L= 21.5	.195	.205	.196	.184	.021	
READING 3 L= 43.5	.307	.326	.316	.295	.031	
READING 4 L= 65	.429	.445	.433	.416	.029	
READING 5 L= 86.5	.303	.336	.316	.289	.047	
READING 6 L= 108.5	.195	.232	.198	.163	.069	
READING 7 L= 130.100	.306	.348	.297	.254	.094	

Calibration Result

Actual Block Thickness: .100 - .500

SITESCAN 250 Measured Thickness: .100 - .500

Measured by:	<i>MPH/L</i>	Audited by:	<i>JW</i>	Preliminary Approval:	
Date:	<i>14/07/07</i>	Date:	<i>14-07-07</i>	Date:	

Rev	Date	Change	Revised by	Approved
B	10.04.14	Added preliminary approval	KJ	
C	12.06.01	Wall thickness form added	KJ	

Item	Qty -443	Part Number	Description
1	X	D412-664-443	CROSSTUBE ASSEMBLY (412 HI AFT)
2	1	D6020-132	CROSSTUBE MATERIAL (132" MIN. LENGTH)
3	2	D3595-063-530	RUBBER CUSHION
4	1	D4909-1	SUPPORT
5	2	D4910-1	CHAFING SHIELD
7	4	MS21920-26	CLAMP
8	2	MS21920-28	CLAMP
9	A/R	SCOTCH-WELD DP460	EPOXY ADHESIVE, 3M SCOTCH-WELD
10	A/R	PROSEAL 890	SEALANT

GENERAL NOTES:

- MATERIAL: MANUFACTURED FROM D6020-132
FINISHED LENGTH = 130.10±0.060 (BEFORE BENDING/TRIMMING)
 - FINISH: PRIME INSIDE AND OUTSIDE PER DART QSI 005 4.2
MASK UNDERSIDE OF CROSSTUBE AS SHOWN (ZN C6-2, HATCHED AREA)
PAINT OUTSIDE PER DART QSI 005 4.2
AFTER PAINTING, REMOVE MASKING AND APPLY MATTE CLEAR COAT PER DART QSI 005 4.2
 - TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
 - UNITS: INCHES UNLESS OTHERWISE NOTED.
 - BREAK SHARP EDGES: 0.005 TO 0.010 MAX.
 - IDENTIFICATION: SCRIBE DART P/N "D412-664-443" AND B/N ON INSIDE OF CUFF PER DART QSI 044 6.4 (VIBRATING STYLUS)
 - WEIGHT: 90.2 lb AFTER MACHINING
88.7 lb FINISHED WEIGHT
 - PART IS SYMMETRIC ABOUT CENTERLINE.
 - EXTREME CARE MUST BE TAKEN TO PROTECT THE OUTSIDE SURFACE OF THE TUBE. THE OUTSIDE SURFACE MUST BE SMOOTH AND FREE FROM SURFACE DEFECTS SUCH AS SCRATCHES, NICKS, OR DENTS. DEFECTS UP TO 0.005" MAY BE BLENDED OUT LONGITUDINALLY. CIRCUMFERENTIAL GRIND MARKS ARE UNACCEPTABLE.
- BENDING**
- BEND PROGRESSIVELY WITH A MINIMUM OF 8 PASSES. MAXIMUM TUBE FLATTENING DUE TO BENDING IS 7% (BASED ON O.D.) IN LOWER HALF OF R35 BEND AND 6% (BASED ON O.D.) ON REMAINING TUBE.
 - LIQUID PENETRANT INSPECT OUTSIDE SURFACE OF CROSSTUBE PER QSI 038. TO BE PERFORMED AFTER FINAL POST-BEND GRINDING. ANY ADDITIONAL GRINDING REQUIRES ANOTHER LPI INSPECTION.

ASSEMBLY

- INSTALL D4909-1 CENTER SUPPORT USING A 0.04" TO 0.07" THICK LAYER OF SCOTCH-WELD DP460 PER QSI 015.
- INSTALL MS21920-28 CLAMPS WITH D3595-063-530 RUBBER CUSHIONS TO SECURE THE D4909-1 SUPPORT ON TOP SIDE OF THE CROSSTUBE. ENSURE CLAMPS ARE ON TOP OF CROSSTUBE SUPPORT.
- IF NOT ALREADY PRESENT ON CHAFING SHIELD, APPLY A THIN COAT OF PROSEAL 890 ON INSIDE CONCAVE SURFACE OF D4910-1 CHAFING SHIELD AND LET CURE PER MANUFACTURER'S INSTRUCTIONS. INSTALL PROSEALED D4910-1 CHAFING SHIELD ONTO CROSSTUBE BY APPLYING A THIN COAT OF PROSEAL 890 ONTO CROSSTUBE. BE SURE TO ELIMINATE ANY AIR GAPS.
- TORQUE CLAMPS ON D4909-1 SUPPORT 80 TO 100 IN-LB. TORQUE CLAMPS ON D4910-1 CHAFING SHIELD 40 TO 50 IN-LB. ENSURE AT LEAST 1.5 THREADS SHOWING IN SAFETY AND THAT NUT HAS NOT BOTTOMED-OUT AFTER TORQUING. PRIOR TO PACKAGING, RE-CHECK TORQUE ON CLAMPS AFTER ADHESIVES HAVE CURED FOR 24 HOURS.

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE


WORK ORDER
NO. 119997 *ML5*
1406-02

RELEASED
2014-05-26
W/S


A	NEW ISSUE	CP	14.04.01
REV.	DESCRIPTION	BY	DATE
DESIGN	<i>Q</i>		
DRAWN	<i>Q</i>		
CHECKED	<i>Q</i>		
MFG. APPR.	<i>Q</i>		
APPROVED	<i>Q</i>		
DE APPR.	<i>Q</i>		
DATE	14.04.01		

DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWING NO. D412-664-443	REV. A SHEET 1 OF 4
TITLE CROSSTUBE ASSY (412 HI AFT)	SCALE NTS


COPYRIGHT © 2013 BY DART AEROSPACE LTD
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS
NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT
WRITTEN PERMISSION FROM DART AEROSPACE LTD.

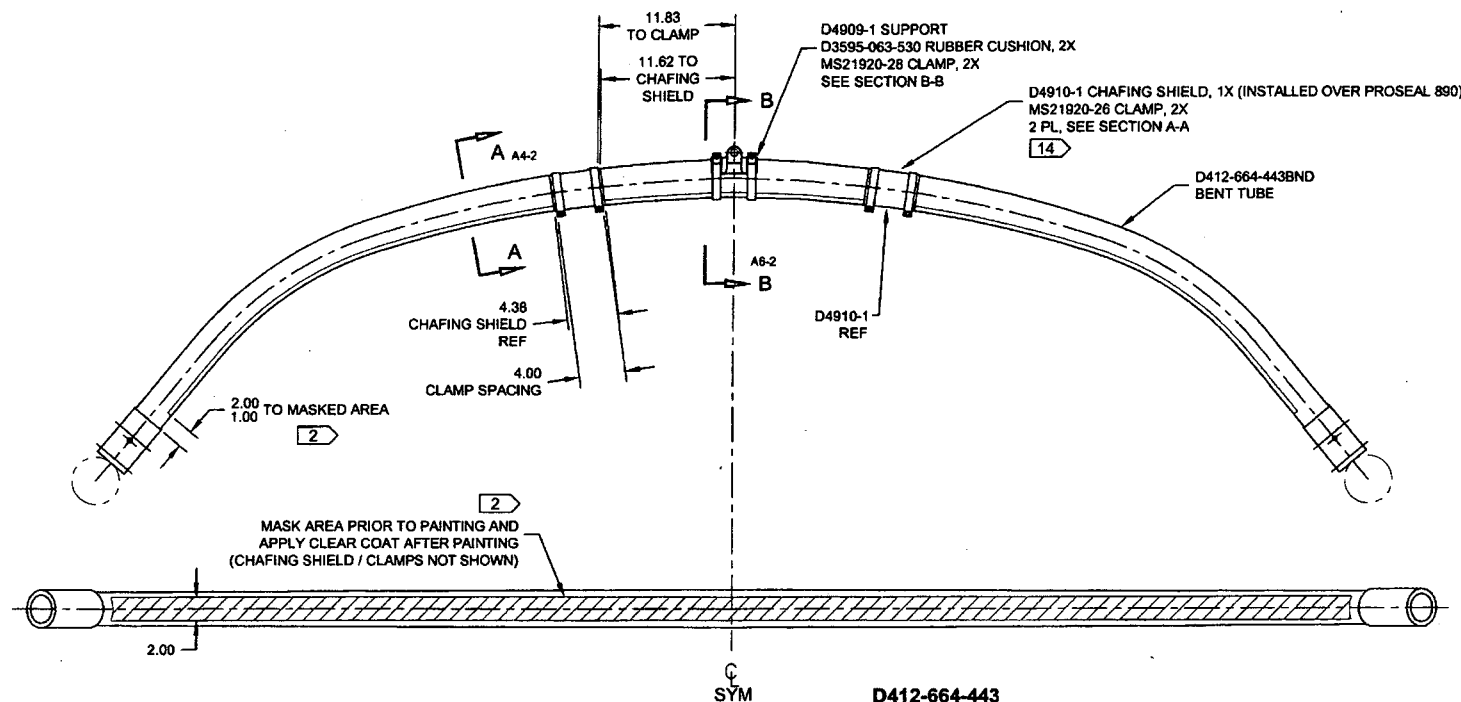

D412-664-443
ASSEMBLY DETAIL

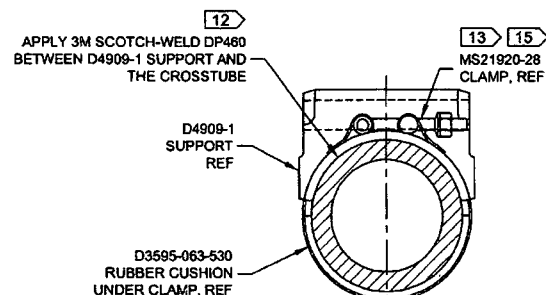


SECTION B-B D4-2
SCALE 4X

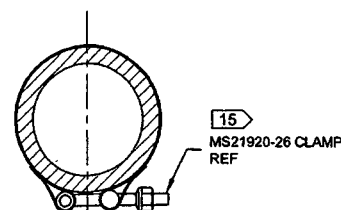


SECTION A-A C6-2
SCALE 4X

RELEASED
2014-05-26

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.		D412-664-443	SHEET 2 OF 4
APPROVED		TITLE	SCALE
DE APPR.		CROSSTUBE ASSY (412 HI AFT)	NTS
DATE	14.04.01	<small>COPYRIGHT © 2013 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS UNDERSTANDING THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

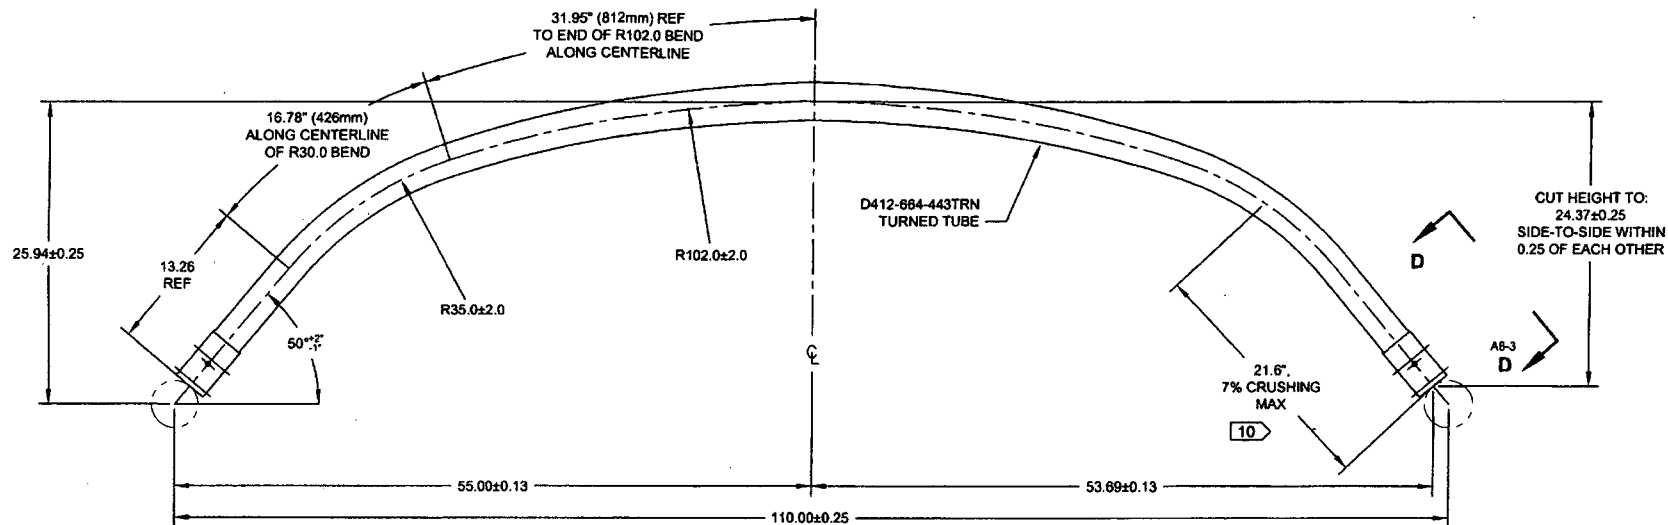


D412-664-443BND
BENDING DETAIL

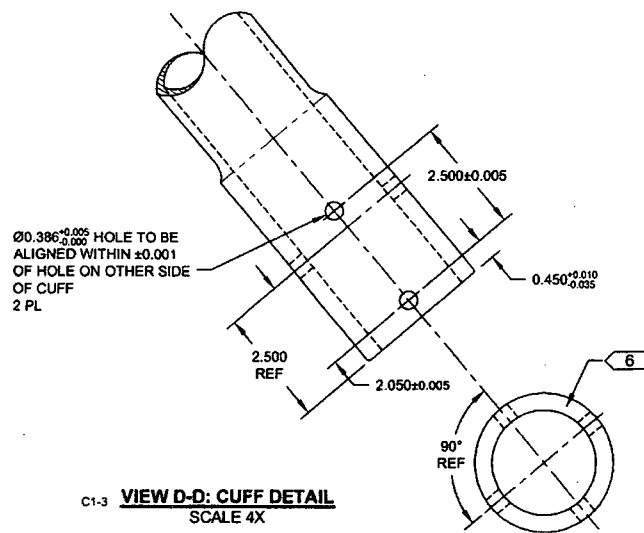


VIEW D-D: CUFF DETAIL
SCALE 4X

RELEASED
2014-05-26


DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.		D412-664-443	SHEET 3 OF 4
APPROVED		TITLE	SCALE
DE APPR.		CROSSTUBE ASSY (412 HI AFT)	NTS
DATE	14.04.01	<small>COPYRIGHT © 2013 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

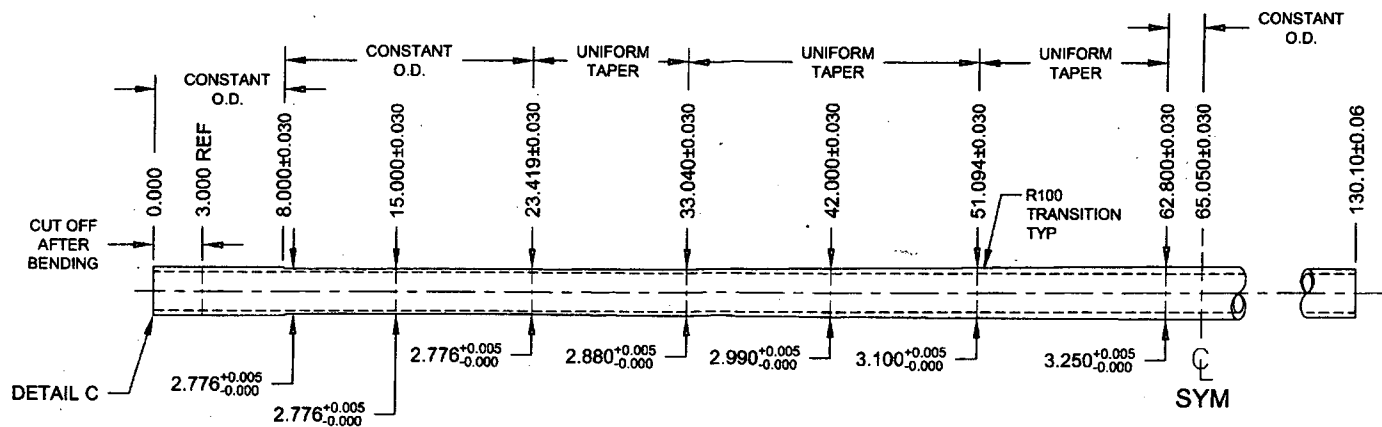

D412-664-443TRN
TURNING DETAIL

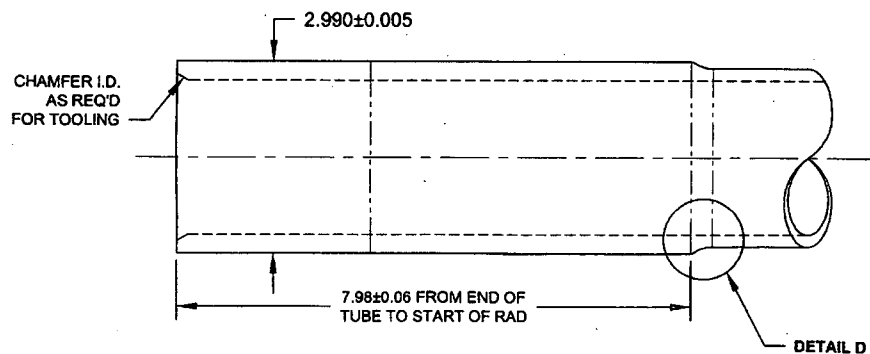

DETAIL C:
CUFF TRANSITION
SCALE 4X

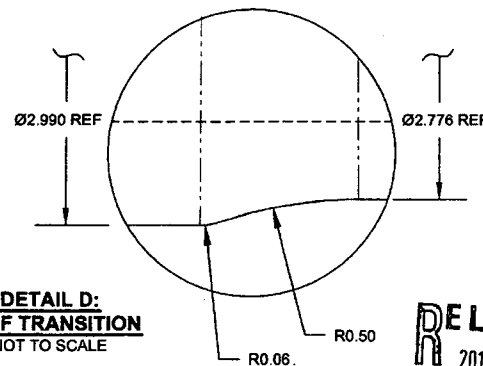

DETAIL D:
CUFF TRANSITION
NOT TO SCALE

RELEASED
2014-05-26

DESIGN		DART AEROSPACE LTD
DRAWN		HAWKESBURY, ONTARIO, CANADA
CHECKED		DRAWING NO. REV. A
MFG. APPR.		D412-664-443 SHEET 4 OF 4
APPROVED		TITLE SCALE
DE APPR.		CROSSTUBE ASSEMBLY (412 HI AFT) NTS
DATE	14.04.01	COPYRIGHT © 2013 BY DART AEROSPACE LTD

